

Wedge™ Removal

Removal Instructions

NEX WEDGE · NL200




Tools Needed

A Slide Hammer




Removal Steps

1 Remove Wedge
Place the hook of the Slide Hammer in the slot of the Wedge and hammer upwards.

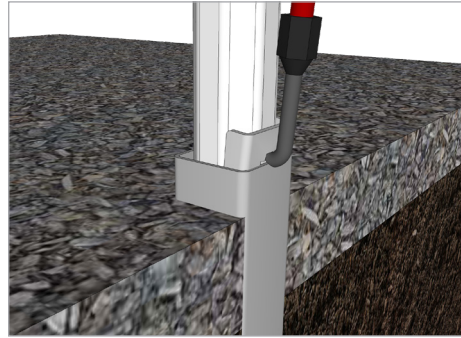

Remove the Wedge once loosened.

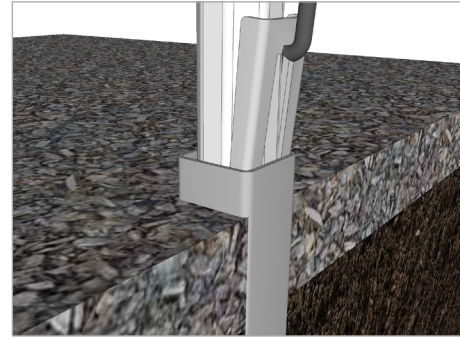

2 Remove Post
Lift the NEX Post out of the anchor.

